Panasonic

Operating Instructions
使用说明书

Battery Shaver
电动剃须刀

Model No. ES6500
型号

English 2

中文 6

保修证 10

Before operating this unit, please read these instructions completely and save them.
操作本产品前请阅读全部说明并妥善保管。

Safety instructions

- Be sure to turn the shaver off before maintenance.
  - Failure to do so may result in an accident or injury.
- Do not alter the appliance. Also, do not disassemble or repair it.
  - It could result in injury. Contact the shop where you purchased the appliance or your nearest service center for repairs.
- Before use, always make sure that the foil has not become damaged or misshapen.
  - Failure to do so may cause damage to skin.
- Do not apply excessive pressure to the foil.
  - It could break the foil, resulting in scratching of the skin.
- Do not use the appliance for any purpose other than shaving.
  - It could break or deform the foil, resulting in scratching of the skin.
- Do not short-circuit, disassemble, or discard the battery in a fire.
  - It could result in burns or injury.

WARNING - Keep the appliance dry.

SPECIFICATIONS
Model: ES6500
Batteries: Two AA LR6 alkaline dry-cell batteries (Sold separately)
This product is intended for household use only.

ES6500_CH.indb 2 2008/01/10 11:52:00

Parts identification

① Protective cap
② Tab
③ Outer foil
④ Inner blade
⑤ Inner blade block
⑥ Switch lock button
⑦ Switch
⑧ Battery cover
⑨ Cleaning brush

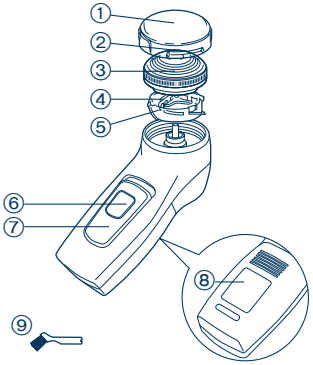

Replacing batteries

1 **Slide the switch to “0”.**

2 **Remove the battery cover.**

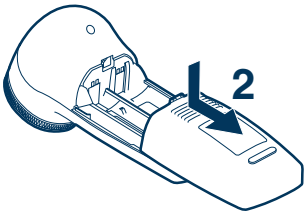

ES6500_CH.indb 3 2008/01/10 11:52:00

3 **Insert two AA (LR6) alkaline batteries.**

- Do not use a new battery together with an old one.
- If the shaver will not be used for a long time, please remove the batteries.
- Make sure that the old batteries are disposed of at an officially assigned location.

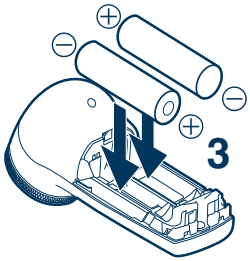

4 **Reattach the battery cover.**

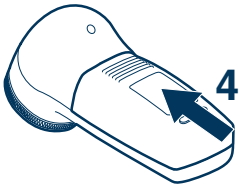

Using

1 **Remove the protective cap while pressing the tabs.**

2 **Check that the outer foil is not deformed or damaged.**

3 **Slide the switch to “1” while pressing the switch lock button.**

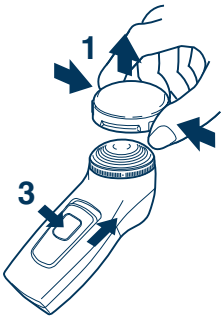

Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard.

ES6500_CH.indb 4 2008/01/10 11:52:01

• Attach the protective cap to prevent the damage of the outer foil after use.

Cleaning with the brush



1 Remove the outer foil and the inner blade block from the main body.

2 Remove the inner blade block from the outer foil.

Grasp the center axis of the inner blade block and pull it straight up.

• Incline the inner blade block to one side when it cannot be removed.

3 Cleaning with the brush as illustrated.

Outer foil	Inner blade block	Main body
	Do not apply excessive pressure when cleaning the inner blade block. The inner blade may be removed from the inner blade block.	

ES6500_CH.indb 5 2008/01/10 11:52:01

安全须知

- 请确保在保养前关闭剃须刀。
  - 否则，可能会导致事故或伤害。
- 请勿改动该电器。此外，请勿对其进行拆卸或维修。
  - 否则，可能会导致伤害。请联系您购买该电器时的商店或离您最近的服务中心进行维修。
- 使用之前，请始终确保刀网没有受损或变形。
  - 否则，可能会造成皮肤伤害。
- 请勿对刀网施加过多的压力。
  - 否则，可能会损坏刀网，从而导致皮肤刮伤。
- 请勿将该电器用于剃须以外的任何其他用途。
  - 否则，可能会损坏刀网或使刀网变形，从而导致皮肤刮伤。
- 请勿使电池短路、分解电池或将电池丢入火中。
  - 否则，可能会导致灼伤或伤害。

警告 – 请保持电器干燥。

规格

型号：ES6500
电池：2节5号碱性电池（需另外购买）
本产品仅限家庭使用。

ES6500_CH.indb 6 2008/01/10 11:52:01

各部分名称

① 保护盖
② 释放按钮
③ 外刀网
④ 内刀头
⑤ 内刀头的固定架
⑥ 开关锁定按钮
⑦ 开关
⑧ 电池盖
⑨ 清洁刷

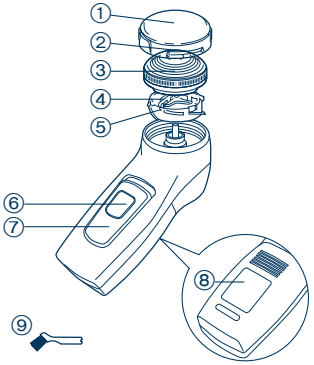

更换电池

1 将开关滑动到“0”。

2 取下电池盖。

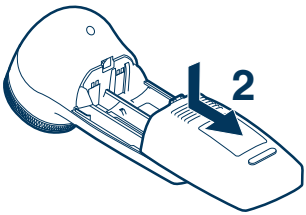

ES6500_CH.indb 7 2008/01/10 11:52:01

3 **插入2节5号碱性电池。**

- 请勿将新旧电池混在一起使用。
- 如果长期不使用剃须刀，请将电池取出。
- 请确保在官方指定的抛弃地点丢弃旧电池。

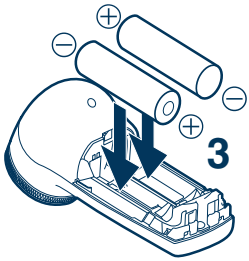

4 **重新装上电池盖。**

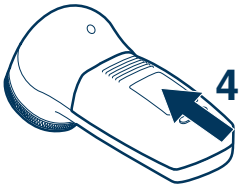

使用剃须刀

1 **在按下释放按钮的同时取下保护盖。**

2 **请确认外刀网没有变形或受损。**

3 **在按下开关锁定按钮的同时将开关滑动到“1”。**

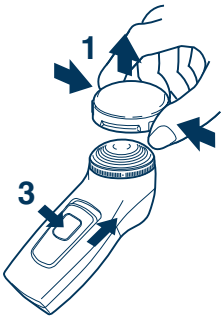

中文

用另一只手绷紧脸上皮肤，逆着胡须生长方向前后移动剃须刀。

- 使用后，请装上保护盖，以防止损坏外刀网。

ES6500_CH.indb 8 2008/01/10 11:52:01

使用刷子清洁

1 **从主机上取下外刀网和内刀头的固定架。**

2 **从外刀网上取下内刀头的固定架。**
捏住内刀头的固定架的中心轴竖直拔起。
• 无法取下时，请将内刀头的固定架倾斜到一侧。

3 **如图所示那样使用刷子清洁。**

外刀网

内刀头的固定架

清洁内刀头的固定架时，请勿过度用力。内刀头可能会与内刀头的固定架分开。

主机

ES6500_CH.indb 9 2008/01/10 11:52:02

Panasonic

保修证

保修条款

有关保修期内Panasonic商品的保修（无偿修理），自购入之日起开始实施。

1. 保修期内的商品只可在松下维修店进行保修；保修时，请出示本保修证及购机发票。
   以下两点需特别注意：
   a. 本保修证遗失后不再补发，请妥善保管；
   b. 本保修证仅限于中华人民共和国国内有效（但香港、澳门、台湾三地区暂不可使用）。
2. 自购入之日起在以下期间内，正常使用中发生故障时进行保修。
   a. 整机（除刀头、刀网、替刃、修剪刀外）2年内无偿；
   b. 专业理发器6个月内无偿；
   c. 附件：刀头、刀网、替刃、修剪刀有偿提供（不在保修范围内）。
3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：
   a. 未按商品使用说明书要求使用、维护、保管而造成损坏的；
   b. 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
   c. 不经松下认定维修店维修人员拆动造成损坏的；
   d. 不能出示本保修证及有效购机发票的；
   e. 保修证上记录的信息与商品实物标识不符或者涂改的；
   f. 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。
4. 本保修条款只适用于消费者个人为生活需要而购买使用的场合，不适用于经营性等使用。

松下电器免费顾客咨询服务中心：800-810-0781
手机/小灵通/未开通800业务地区：400-810-0781
松下电器网站：http://panasonic.cn

松下电器（中国）有限公司

ES6500_CH.indb 10 2008/01/10 11:52:02

Panasonic

电动剃须刀保修证

销售店纪录

商品名称	电动剃须刀	商品型号	ES6500
机身号码		购买日期	

顾客姓名		联系电话	
顾客地址			

销售店名称		销售店电话	
销售店地址			

维修记录

维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			

维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			

维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			

ES6500_CH.indb 11 2008/01/10 11:52:02

大连松下电工有限公司
Panasonic Electric Works (Dalian) Co.,Ltd

工厂地址：大连市甘井子区辛寨子东街15号
(Address)：NO.15 East street of Xinzhaizi, Ganjingzi section
Dalian, Liaoning province
电话(Tel)：0411-86313942
传真(Fax)：0411-86313941
邮政编码(Post Code)：116033
原产地：中国

No.1 EN, CH (2008-01-00)

中国印刷
Printed in China